

Quick Start Guide – ProLogic L01

 


Congratulations on the purchase of your new SECURAM ProLogic L01 Safe Lock! This Quick Start guide will help you set up your ProLogic L01 for use. **All programming must be completed with the safe door open. The safe lock system is powered by (1) 9V alkaline battery. Duracell or Energizer brands are recommended.**


The ProLogic L01 comes with (2) default codes:
ID00 or the Super Code is set to 111111
ID01 or the Manager Code is set to 123456
It is recommended to change both codes to unique codes immediately.

Step 1: Change the Default Codes


Press the Menu/OK button. The LCD screen will display “Select Menu”, press the ▼ button, until you see the menu selection “System Menu”. Press OK
Enter the default Super Code 111111; display will show “ID00 Verified” and then “Select Menu” will appear.
Press the ▼ button, until you see the menu selection “Change Code”.




Press Menu/OK

 

Enter a 6 digit code

 

Repeat 6 digit code

 


ID00 Code is now saved


Follow the same procedure to change the Manager Code. Use the default Manager Code 123456 .

Step 2: To Open Lock

 Just enter a valid code:



Enter 6 digit code

 


Valid code will be verified and the lock will open


Step 3: Enroll a User Code

With the ProLogic L01 you can add an additional User Codes. Follow these steps:

 Press the Menu/OK button. The LCD screen will display “Select Menu”, press the ▼ button, until you see the menu selection “System Menu”. Press OK.
Enter the Super Code or Manager Code; the display will show “IDXX Verified” and then “Select Menu” will appear.
Press the ▲ button, until you see the menu selection “Enroll New User”.



 
Press Menu/OK
Display will read “ Set Code of ID02”. Press OK.



Enter a unique 6 digit code



 Repeat 6 digit code



The User code is saved

Note: To Change Any Code

- Press the Menu/OK button. The LCD screen will display “Select Menu”, press the ▼ button, until you see the menu selection “System Menu”.
- Enter the code you want to change
- Scroll to “Change Code” and follow the prompts.

Duracell or Energizer batteries are preferred.

For a full set of Operating Instructions visit our website at www.securamsys.com

IMPORTANT: Warranty Information

Your safe lock is eligible for a 12 month warranty covering product defects. Within 90 days of purchasing your safe/safe lock, please visit our website to register your product.

Please visit www.securamsys.com/warranty and look for the button entitled “Register My Warranty” or download the Date of Service Warranty form.